




SMART REMOTE USER MANUAL

BUTTON SPECIFICATIONS

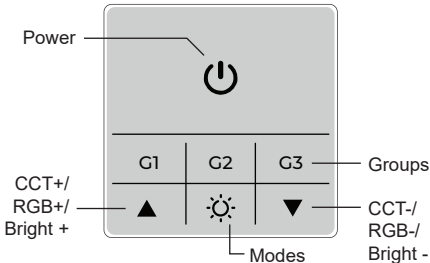

PAIRING REMOTE



To pair the remote, press and hold both the **'Power and UP'** buttons together. The remote will enter pairing mode.



Tap the "+" icon in the app to add a remote. The app will scan for **nearby devices** and display an option to **add them**.

Select the **remote** from the list to complete the **pairing process**.

CONFIGURING GROUP KEYS ON THE REMOTE

Default Group Assignment:

The **first 3 groups** set in the app are automatically assigned to the group keys **G1, G2, and G3** on the remote.

These keys will function for the first three groups from the app until **reconfigured**.

Accessing the Control Screen:

To configure the group keys, open the control screen for the remote in the app. **Long press** the icon of the newly added remote in the app to **access the control screen**.



Entering Configuring Mode:

After opening the control screen, press and hold both the '**Pair**' buttons on the remote to **enter configuring mode**.

Assigning Group Keys:

Once the remote is in configuring mode, you can assign the group keys **1, 2 and 3** to the groups of your preference for easy access.

G1

G2

G3

Group Keys: You can **assign** any group to these **three buttons** for easy **access and control**.

CHANGE MODES



The mode button cycles through three functions: **Lightness**, **CCT**, and **RGB**. Press **once** for Lightness, **press again** for CCT, and **press once more** for RGB.

FUNCTION KEYS



The “**Up**” and “**Down**” arrow keys function differently in each mode:

Light Mode: Adjust brightness levels (Dimming Control).

CCT Mode: Change color temperature from Warm White to Cool White in steps.

RGB Mode: Scroll through the full color spectrum.

Use the arrows based on the selected mode to control these settings.

MANUAL UNPAIRING REMOTE



Resetting/Unpairing The Remote

If you need to reset or unpair the remote from the app, follow these steps:

Ensure the Remote is On:

Make sure the remote is powered on before attempting to reset or unpair it.

Press the Reset Buttons:

Simultaneously press and hold both the **'Power and Mode'** buttons on the remote.

MANUAL UNPAIRING REMOTE

Hold for a Few Seconds:

Keep holding both buttons for a few seconds until you see a notification on the remote **(such as a light flash)** indicating that it is resetting.

Remote is Reset:

Once the reset process is complete, the remote will return to its **default factory settings**.

Any previous pairings with the app will be erased, and the remote will need to be paired again before it can be used.

Re-pairing the Remote:

To use the remote again, follow the steps to pair it with the app as outlined in the "Pairing the Remote with the App" section.

UNPAIR VIA APP

Open the Control Screen:

Press and hold the **remote icon** in the app to open the **control screen**.

Enter Configuring Mode:

On the control screen, press and hold the **'UNPAIR'** button on the remote to enter **configuring mode**.

Select Kickout in the App:

Once in configuring mode, tap the **'Kickout'** button in the app to **unpair** the remote.

Confirm Unpairing:

The **LED** on the remote will **blink 8 times** to confirm that the remote has been **successfully unpaired**.